



Models 5000L, 5000LE, 5000R, 5000RE Serenity Series

Parts Listing


A
Chair
1 Unit

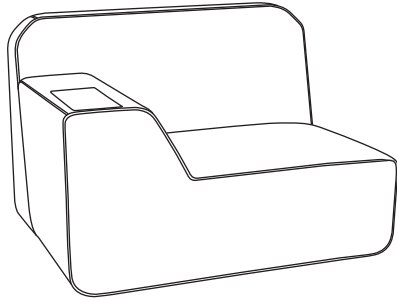

 
B
Legs
4 Units



C
6x25mm Screws
12 Units

 

D
Allen Wrench
1 Unit

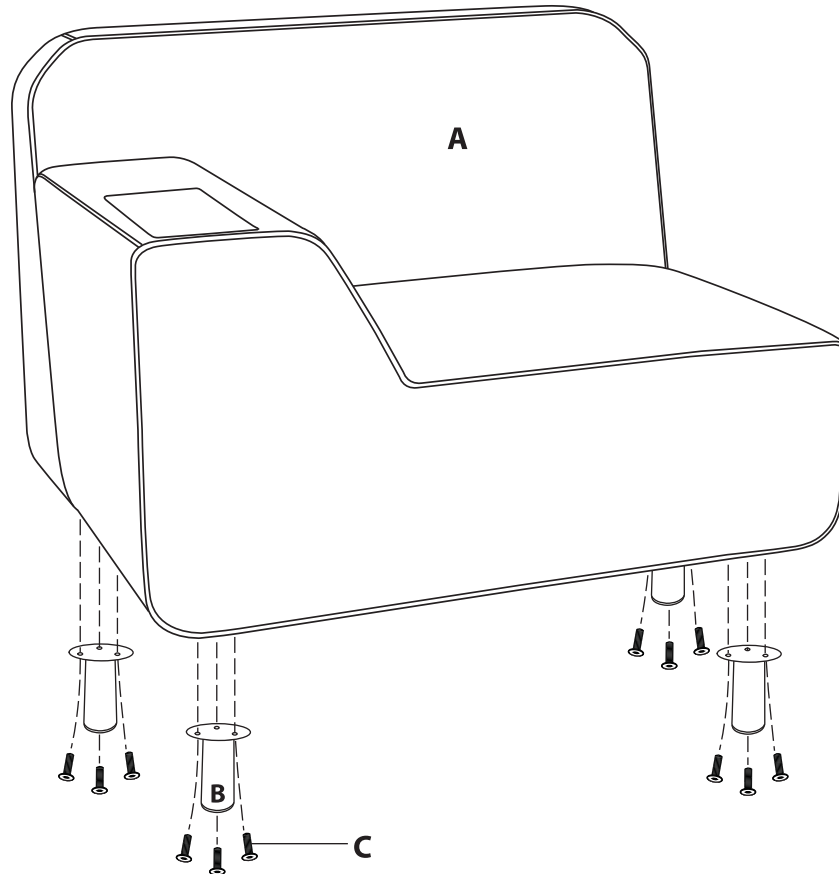

WEIGHT CAPACITY: 500 lbs.

Assembly Notes:

During assembly, hand tighten screws only. When all screws are in place, you may then tighten all screws completely.

CAUTION:

1. Do not use this chair as a step ladder.
2. Check for loose legs and tighten them every 6 months.

Assembly Instructions




Tools Needed: Allen Wrench (provided)

Models 5000LE & 5000RE

Do This Before Step 1:

Carefully lay Chair (A) onto its back and pull open corner of lining attached with velcro on bottom of Chair (A). Pull out electrical cord and reattach velcro. Plug-in electrical cord or stash cord away in pocket after Legs (B) are attached (see Step 1).

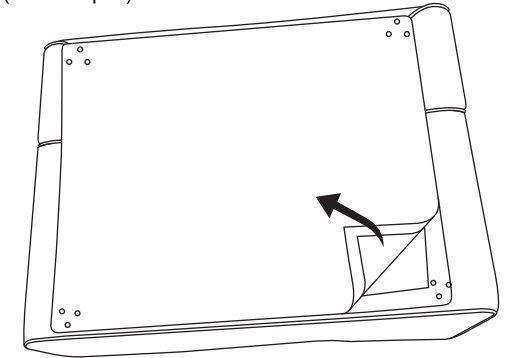

Step 1: Attach the Legs (B) to the Chair (A) by carefully laying the Chair (A) onto its back and screwing each Leg (B) into the bottom of the chair frame. Align holes in each Leg (B) with corresponding holes in each corner of the bottom of the chair frame. Insert Screws (C) through the holes in Legs (B) and into the bottom of the chair frame. Tighten using Allen Wrench (D).

Step 2: Return Chair (A) to upright position.

ofm
Furniture For The Real Office™

161 Tradition Trail • Holly Springs, NC, 27540
800-520-7471 (voice) • 919-362-4765 (fax)
919-303-6389 (voice) • www.ofminc.com
support@ofminc.com