

# ReadyLink Group Seating Row Starter 212/212T & Add-on Seat 211/211T




212 Row Starter and 211 Add-on Seat



ReadyLink with Hideaway Tablet  
212T Row Starter and 211T Add-on Seat



Add-on Leg

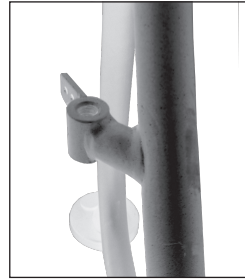

Row Starter Leg




**Step 1:** Lift seat/back unit between standing Row Starter Leg and Add-on Leg

## Assembly Instructions


**Step 1:** Stand up Row Starter Leg and Add-on Leg.

**Step 2:** Lift seat/back unit and insert bolts into connector joints.

**Step 3:** Thread cap nut onto bolt end.

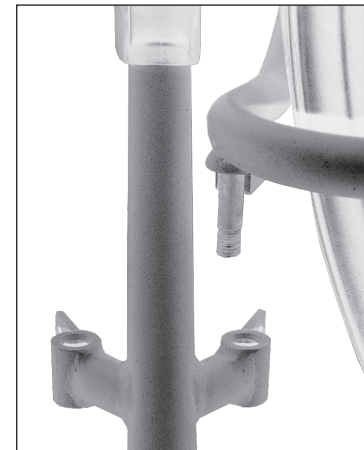

**Step 2:** Insert bolts into joint connectors

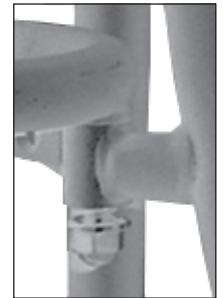

**Step 3:** Thread cap nut onto bolt end



### Optional Floor bolting instructions:

Professional Installation recommended.  
Remove plastic hole cover from base.  
Install floor anchor and screw base onto floor.  
After bolting replace cover to conceal bolt.



Holly Springs, NC, USA  
800-520-7471 (voice)  
919-303-6389 (voice)  
919-362-4765 (fax)  
support@ofminc.com  
www.ofminc.com