



Parts Listing







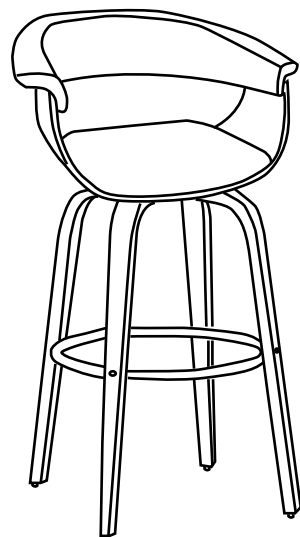


Assembly Instructions

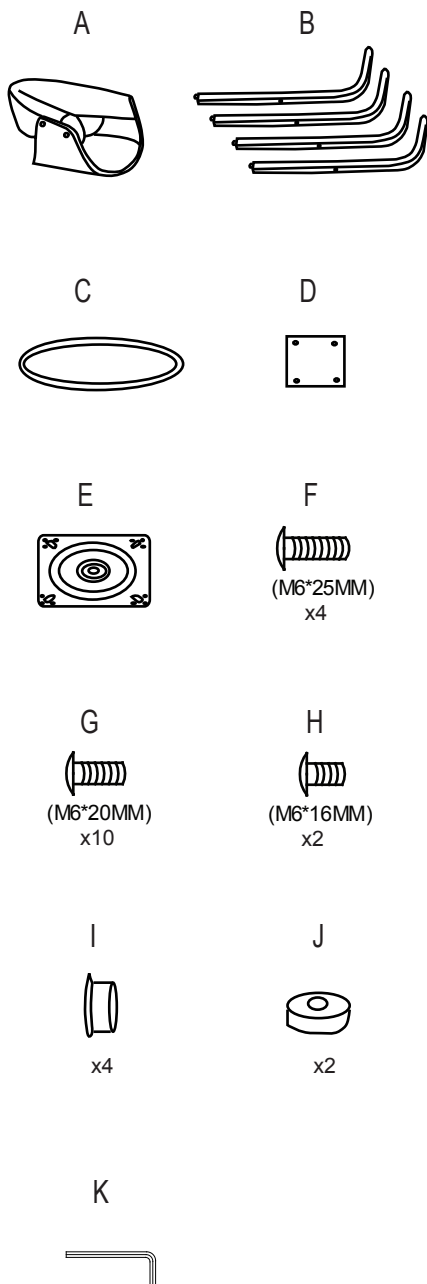

Tools Needed: Allen Wrench (provided)
Please read all instructions before assembly.

- Step 1: Use Allen Wrench (K) to slightly tighten 4 wooden Legs (B) to the Center Part (D) with 4 Screw(G) as below drawing showing.
- Step 2: Use Allen Wrench (K) to slightly tighten the 4 wooden Legs (B) to the Footrest Ring (C) with 4 Screws (F). Please make sure the small holes on the Footrest (C) facing floor after the chair is finished.
- Step 3: Rotate the Swivel Plate (E) as below drawing showing.
- Step 4: Use Allen Wrench (K) to tighten the Swivel Plate (E) to the Wooden Legs (B) with 4 Screws (G). Tighten All Screws in previous step with Allen Wrench (K).
- Step 5: Put the Washer (J) upon the Front Holes in Seat (A).
- Step 6: Use Allen Wrench (K) to tighten the Swivel Plate (E) to the Seat (A) with 2 Screws (H) in front and 2 Screws (H) at back.
- Step 7: Insert 4 Plugs (I) to the 4 Wooden Legs (B).
- Step 8: The Assembly of the stool is finished. Please adjust the nails on Wooden Legs (B) if Stool is uneven.

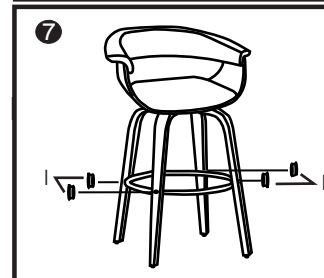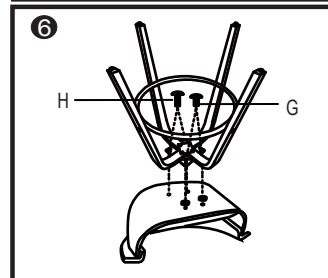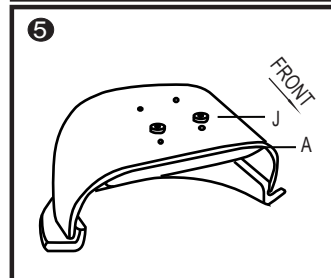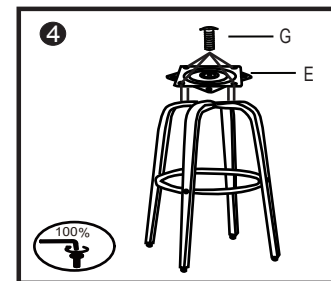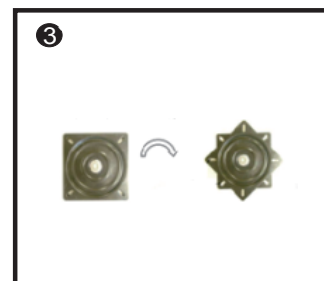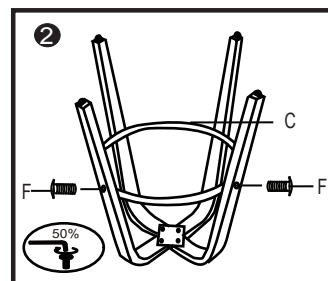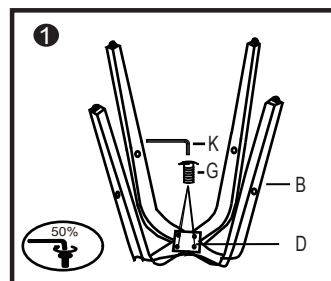

WEIGHT CAPACITY: 250 lbs.

Assembly Notes:

During assembly, hand tighten screws only. When all screws are in place, you may then tighten all screws completely.

CAUTION:

1. Do not use this chair as a step ladder.
2. Check for loose screws and tighten them every 6 months.

161 Tradition Trail, Holly Springs, NC, 27540
800-520-7471 (voice) 919-362-4765 (fax)
919-303-6389 (voice) www.ofminc.com
support@ofminc.com